



SETUP CHECKLIST



Tick off the steps below to ensure you're all set up for a perfect calibration.

ENVIRONMENT

- Choose a location with a solid floor.
- Attach the target firmly to a vertical wall at approximately the height of the camera lens.
- Ensure the target is well lit with a stable light source.
- Attach the camera or lens to a solid, sturdy tripod.
- Position the camera the appropriate distance from the target.
- Connect the camera to the computer using a high quality USB cable.

CAMERA

- Check the camera battery is at least half (> 50%) charged.
- Remove any battery grip from the camera.
- Aim the centre focus point of the camera approximately at the centre of the FoCal Target.
- DSLR Only: Cover the eyepiece of the camera.

SETTINGS

- Pre-2009 Nikon cameras only: Ensure Live View Mode in the SHOOTING menu is set to Tripod.
- Where available, ensure there are no limits on available AE mode, aperture, shutter speed, ISO, exposure compensation or focus modes.
- Switch camera to Aperture Priority mode
- Select single autofocus mode.
- Select single focus point mode.
- Choose the centre focus point.
- Ensure Focus Limiter is disabled on lens (if applicable).
- Ensure any image stabilisation is disabled on lens and/or in-camera (if applicable).

Print this sheet off and tick off the entries above to make sure you're all set up for calibration and testing.

Further details are available at www.reikanfocal.com/checklist.